



GALLERIA™

INDOOR + OUTDOOR DISPLAY BOARD
ASSEMBLY INSTRUCTIONS

TWO CONFIGURE OPTIONS

HARDWARE INCLUDED:

(COUNT: 4) Long Extension Post

(COUNT: 4) Short Connector Post



(COUNT: 4) Tackable Tiles

(COUNT: 6) Velcro Straps

(COUNT: 1) Carrying Bag

Questions or concerns regarding parts?
Please contact us at 1.800.553.0110 or
email us at customerservice@screenflex.com

(*Confirm count of all hardware
to ensure effective assembly)

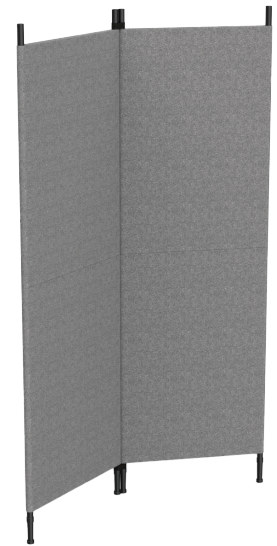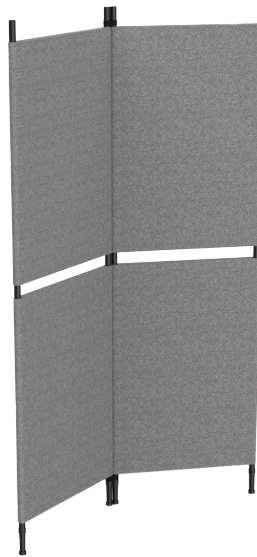

STEP 1.

Lay (2) bottom tiles flat. Bottom tiles have the feet on the bottom.




STEP 2.

Place (1) Velcro strap on one of the inner bottom legs and wrap the strap around the two inner leg legs.



STEP 3.

Lay (2) top tiles on the ground with the "Galleria" logo facing up.

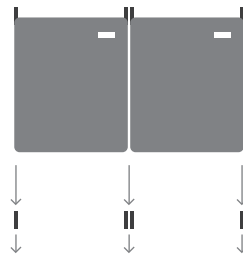

STEP 4.

Insert the (4) shorter connector posts into the hole openings. Slide the top tiles onto the shorter connector posts to connect the bottom and top tiles together.

(*For taller dimensions: Insert the (4) long extension posts into hole openings. Add (1) Velcro strap for added stability to the middle of the display board.)



STEP 5.

Place (1) Velcro strap on one of the inner top posts and wrap the strap around the two inner top posts.



STEP 6.

Stand up the display board. Move the connecting panels together to a 90-degree angle for best stability.



STEP 7.

Loosen and adjust leg extensions if needed on uneven surfaces.

