SCREENFLEX®
PORTABLE PARTITIONS


HARDWARE INCLUDED:	RECOMMENDED TOOLS:
• Bolts (x2)	• Socket Wrench
• Mounting Plates (x2)	• Drill

Questions or concerns regarding parts?
Please contact us at 1.800.830.0210 or email us at customerservice@screenflex.com

WALL-MOUNTED STRAIGHTFLEX

ASSEMBLY INSTRUCTIONS

STEP 1.
Place the two standard cubicle feet and the two door kit feet (the U-shaped receiving foot and the cut-out foot beside the door opening). Confirm whether your door is left- or right-handed before assembling. The receiving panel should be installed last.

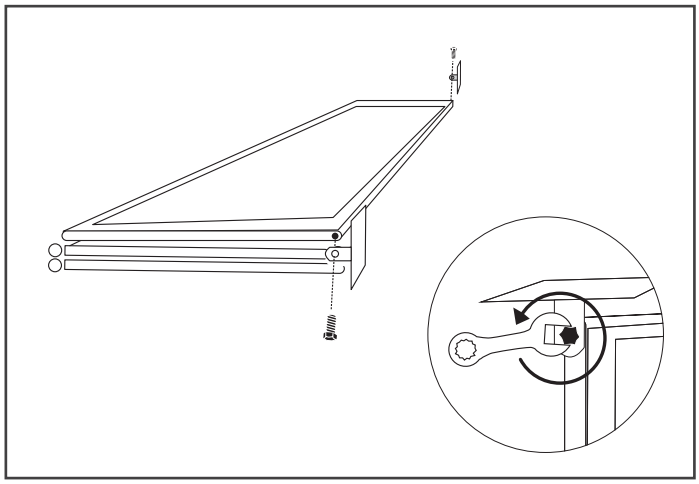

STEP 2.
Install the cubicle panels between the feet and secure them using the post kits.

